


MULTICOAT SCUPPER FLASHING DETAIL

NOT TO SCALE

* NOTE: For installation instructions please refer to the system specification sheets posted on our website. .


NOTES:

- APPLY POLYURETHANE CAULKING ON ALL FLASHING SEAMS AND OVERLAPS. STANDARD OVERLAP IS BOTTOM TO TOP WITH A 4" OVERLAP.
- 2500 PSI MINIMUM FOR CONCRETE SUBSTRATES
- 5/8" EXTERIOR GRADE MINIMUM FOR PLYWOOD SUBSTRATE
- 1/4" MINIMUM SLOPE REQUIRED ON ALL DECKS
- REFER TO LOCAL BUILDING CODES & STANDARDS

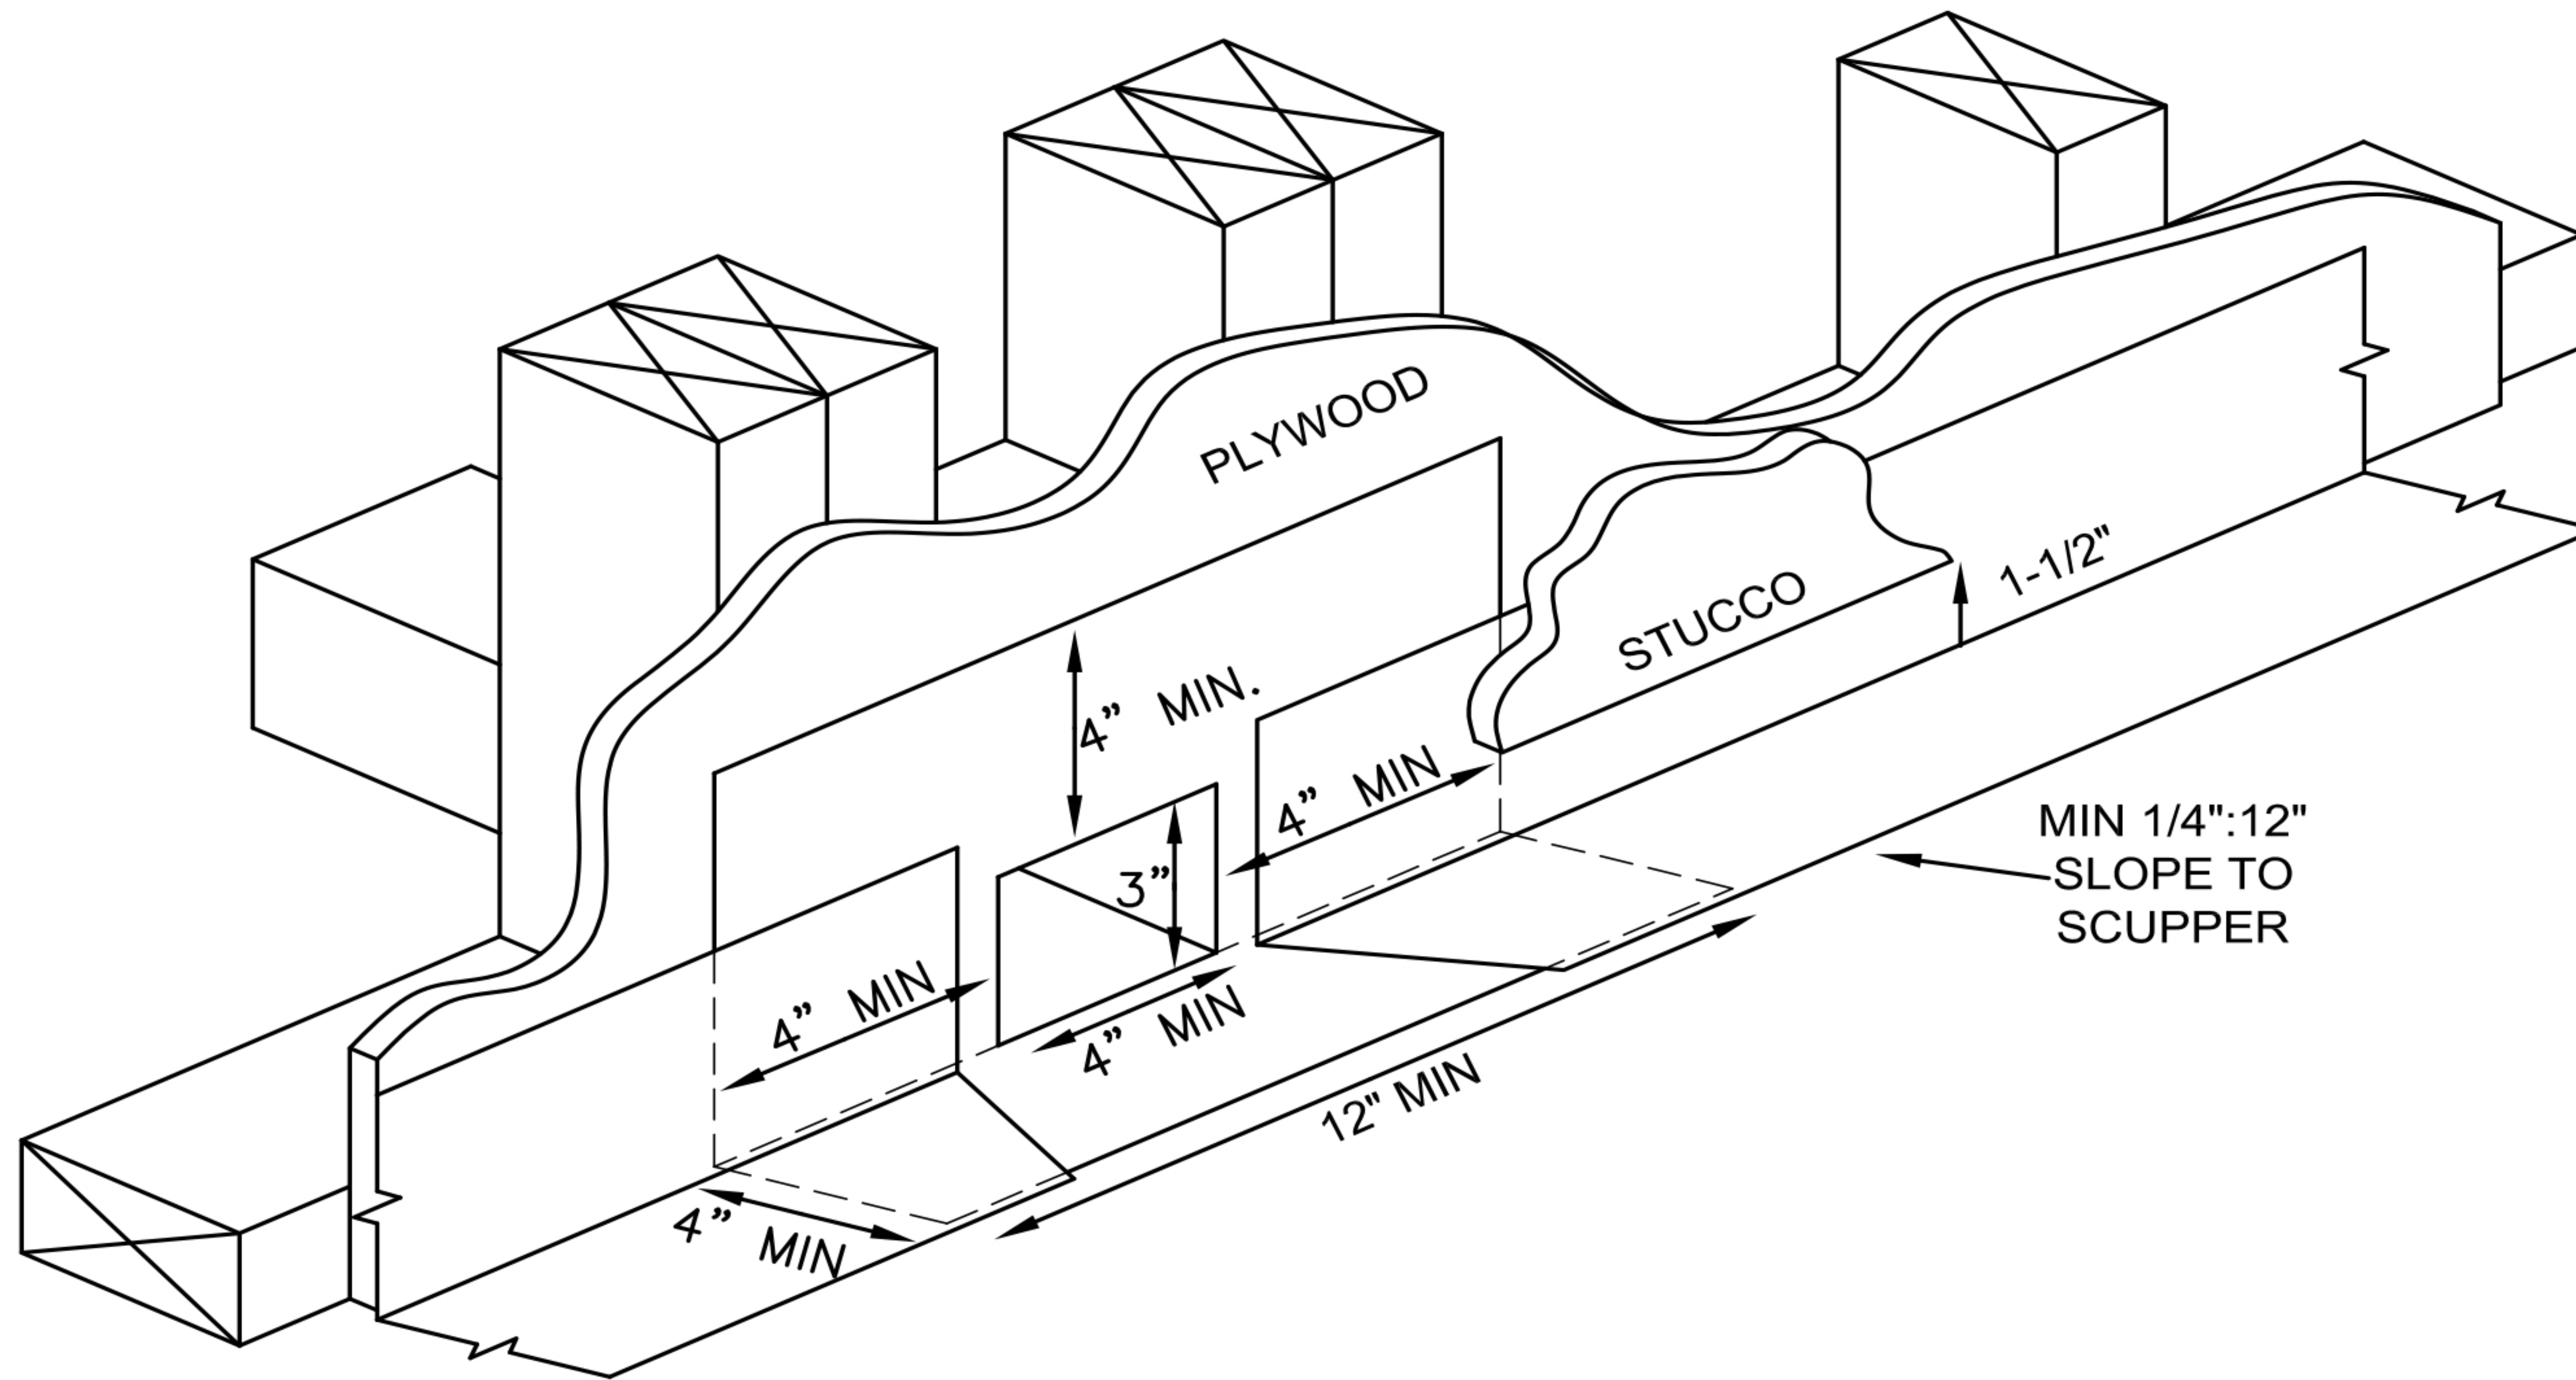


SITE-BUILT PIECES


(RIGHT)

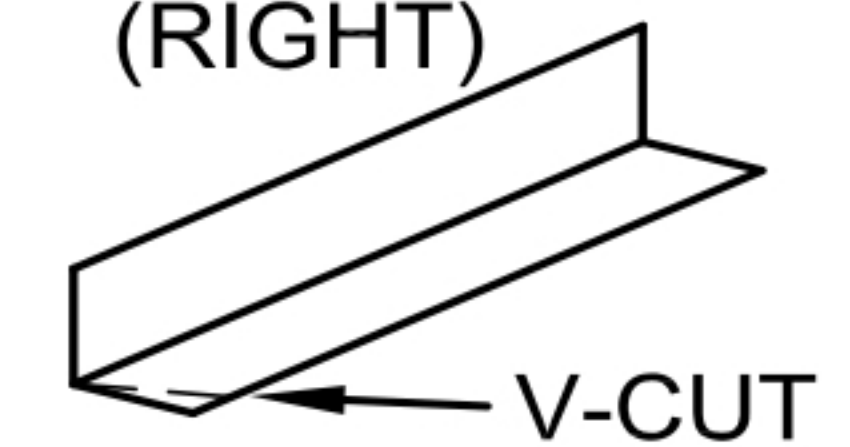

(LEFT)

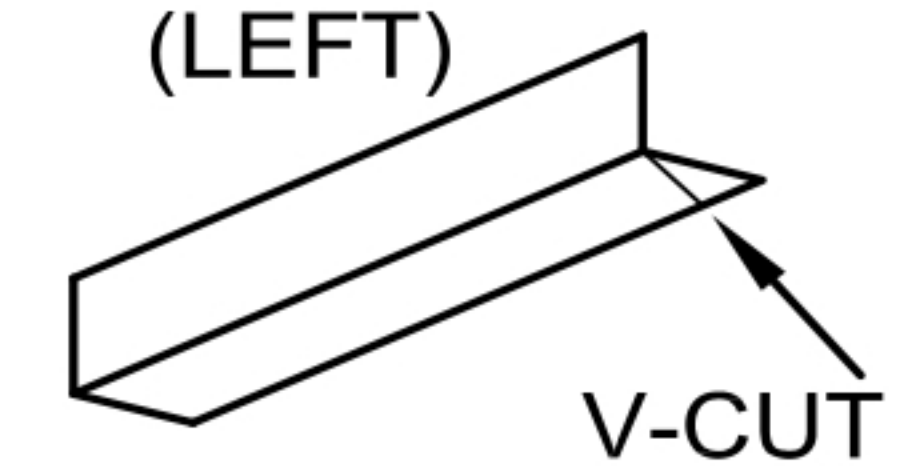

PREFABRICATED SCUPPER FLASHING WITH WP-30

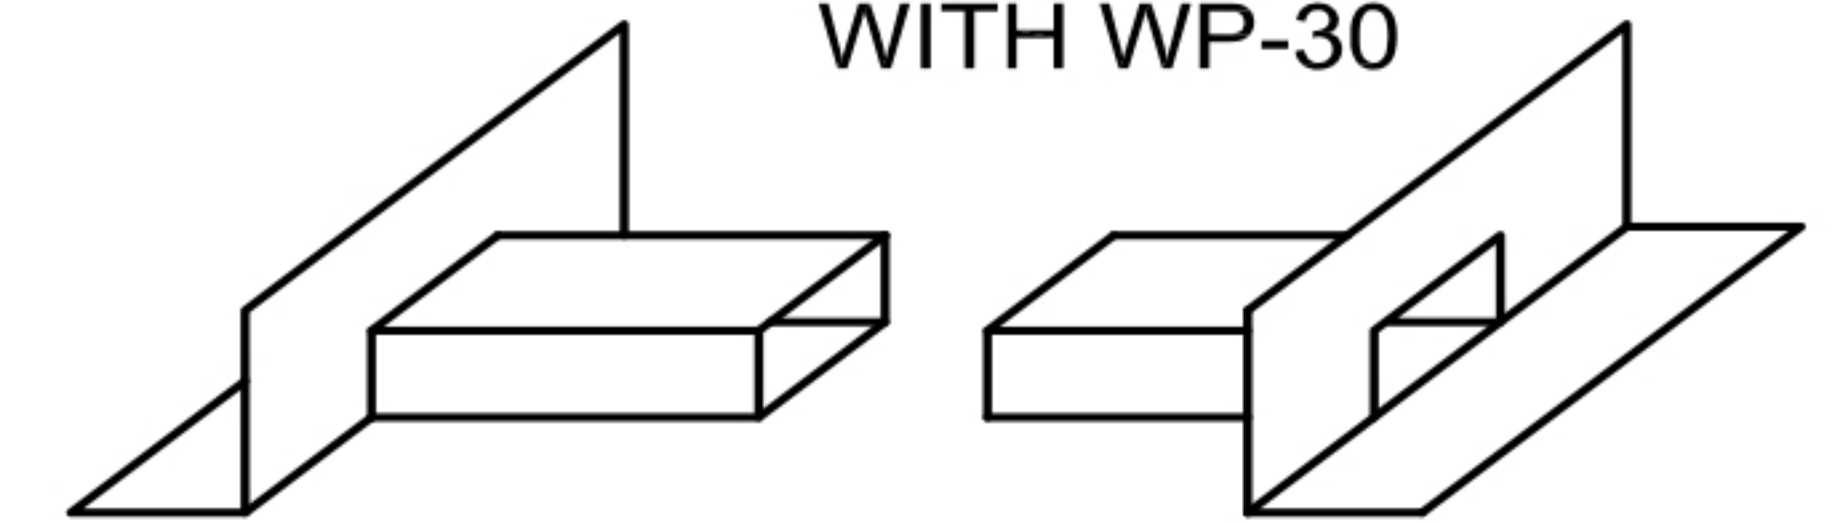

BACK

FRONT

23331 ANTONIO PARKWAY
RANCHO SANTA MARGARITA CA 92679



WWW.MULTICOAT.COM
(877)-685-8426